

Public Calling Card Telephone IP 510-H User Manual

Ver : 8.LR Date: 08.07.2003



10 Hamelacha St. Block 209, New Industrial Park, Rosh - Ha'ayin 48091, Israel.
P.O.Box 13204 Tel - Aviv 61131. Fax: + 972 3 902 56 84 Tel: + 972 3 902 56 82
E-mail: sale@peryphton.co.il Web: www.peryphton.co.il

We thank you for buying our Public Calling Card Telephone IP 510 -H and wish you success and enjoyment in using it.


The telephone is planned for easy operation by the client without any need of special explanation apart from looking at the instructions displayed on the front of the phone and following them.

We're sure that this telephone will be a good replacement to the existing system, using regular phone and random collection.

When using a calling card, the customer enjoys low rates for international and an intercity calls through the Prepaid Platform.

In order to have the most advantages of the Public Calling Card Telephone IP 510 -H, please read the installation and operation instructions.

For operating instructions and technical support, please contact customer service.

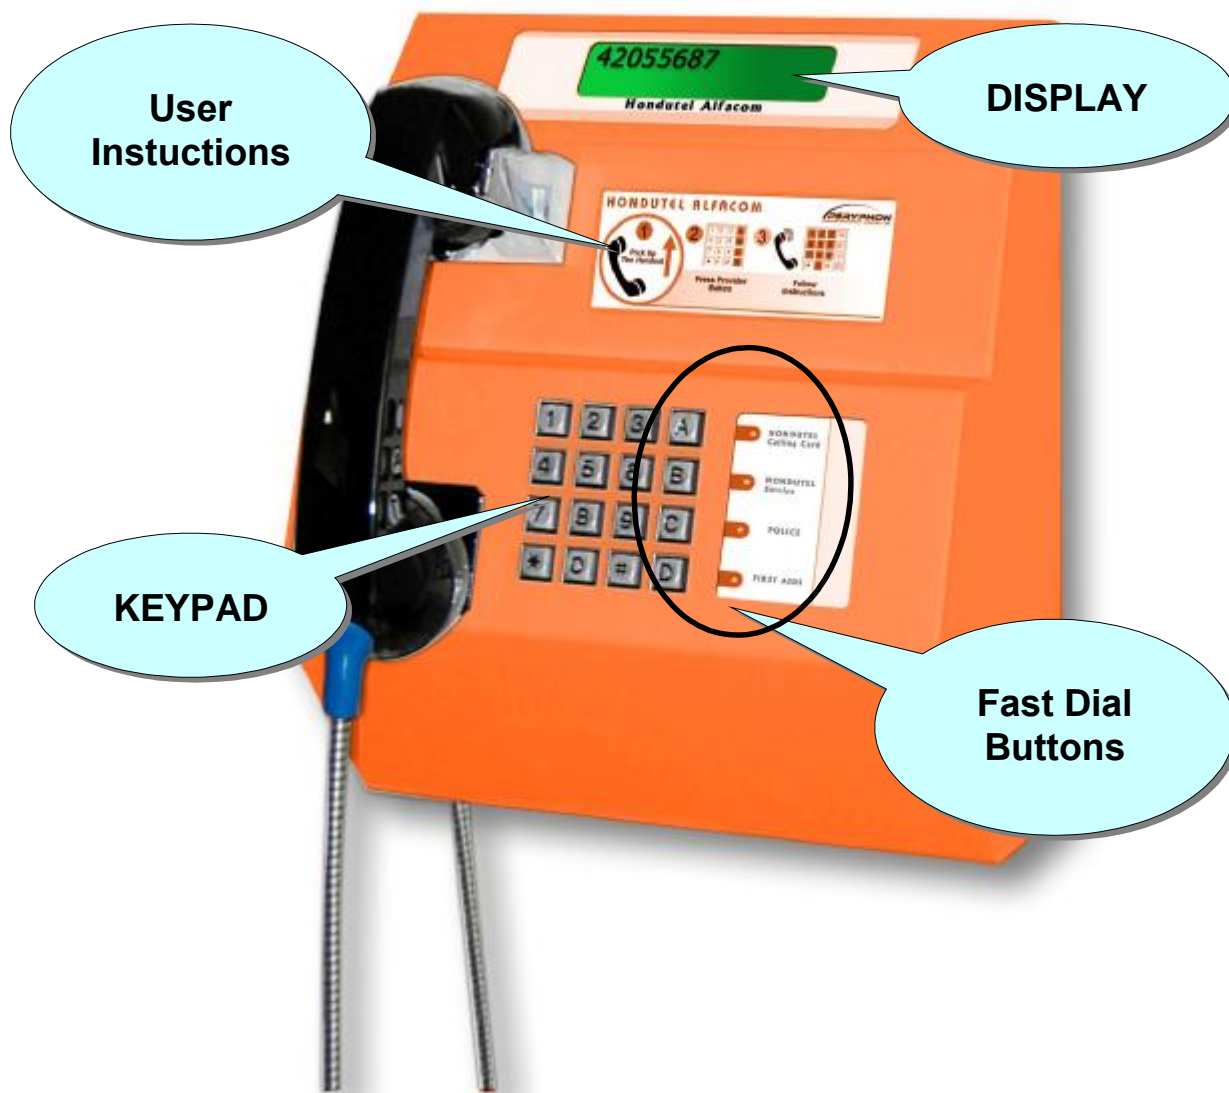

Reliability of the product:

The Public Calling Card Telephone IP 510 -H is designed to be used as a medium connected to the country's communication system. The manufacturer won't be responsible for any damage caused due to improper use of this telephone and/or improper installation.

Humidity and dust:

Avoid using the Public Calling Card Telephone IP 510 in especially humid and dusty locations, otherwise some components may be damaged.

Rain:

The phone must be installed in a proper telephone booth to avoid direct contact with rain.

Position in which to install the phone:

Install the telephone vertically, (straight).

Name of the owner and operating instructions should be installed close to the phone and easy to read.

Comments:

1. You can connect the Public Calling Card Telephone IP 510 -H to the PSTN telephone line 48-60 volt DC 20-120 mA current line.
2. There will be no refund for prepaid cards.
3. Expiry date of the card is printed on it.

The package contains:

1. Public Calling Card Telephone IP 510 -H
2. Warranty document
3. Manual for user
4. 2 keys for the phone

Installation:

1. Bore 4 holes in diameter of 7mm according to the place of the screws in the back of the phone and at a height of 1.4 Meters from the floor. Connect the phone to the wall by 25mm screws.
2. Connect Alkaline 9V battery. (Located on to PCB)
3. Connect the telephone to the country's phone network, connect the Public Calling Card Telephone IP 510 -H to the line socket in the wall.
4. Lift the Handset.
5. The display will show (See page 5: Placing a call. Option onet) :

**Swipe The Card or
Press "A"**

6. If the battery is not connected or empty, the display will show a message to the customer.

**WARNING!
LOW BATTERY**

Function buttons: **A**, **B**, **C** and **D**

Placing a call



1. Lift the handset and listen for dialing tone.
2. Press the fast-dial button **A** to call Prepaid Platform.
3. Listen to instructions from the Prepaid Platform and enter PIN number from card when requested to do so.
4. Upon hearing that your PIN number has been accepted, enter your destination number, including country code in the case of an international call, and city code in the case of an inter-city call.

Follow on Call



In case of a need to dial an extra number, once the pin number was given already by the subscriber, there is no need to place back the handset. The only need in such a case would be to push first the button **B** follow the written instruction on the display, than dial the complete destination number.

Redial function



For redialing the same number, do not replace the handset, but only press fast-dial button **C**

Volume control function



Butten **D** serves to increase / decrease the volume.

Placing an emergency or toll-free call

1. Lift the receiver and listen for dialing tone
2. Dial a number



**Function
Buttons**

How to place a call (part 2)

1. The user has to operate according to the recorded and displayed instructions.

HONDUTEL ALFACOM

PERYPHON
TELECOM ELECTRONIC INDUSTRY LTD

1 Pick Up The Handset

2 Press **A** Button

3 Follow Instructions

1	2	3	A
4	5	6	B
7	8	9	C
*	0	#	D

FC
Redial
Volume



2. Instruction for using prepaid telephone cards (For example):

Do not insert this card into pay phone card slot.

1 Dial:
Public: -free phone number-
Mobile Conner: 2-phone number-
Mobile Orange: 3-phone number-

2 After the beep enter your code number + #:

3 Place a call:
Country Code + Area Code +
Phone number + #


Customer Service: 56342543

56342543


Setup:

For entry to SETUP MENU:

1. Open the phone with the key, push the **PROGRAMMING** button (The button is located on the main circuit) and lift the handset. After 2 sec. release the **PROGRAMMING** button.
2. Display is showing:

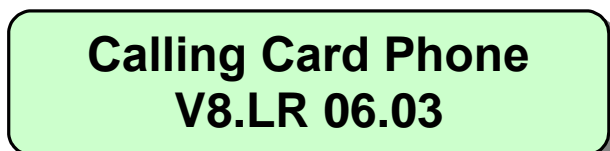

3. After display showing:

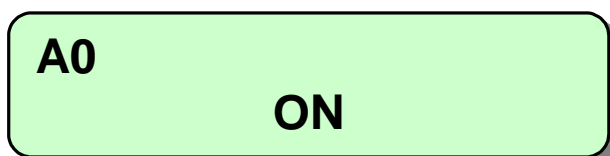

4. To scroll down on menu use button **D**, to scroll up use button **A**

SETUP MENU

Access Number

Function	Display	Notes
Access Number Up to 22 digits	A0 On/Off	Function On/Off. Press * to switch on/off (saved automatically).
	A1 XXXXXX...	In A1 you can program the access number of provider or any other number you wish. Up to 22 digits can be entered. To save the number press B
	A2 05	Delay time permitted between dialing provider no. and pin no. (From 1-39 seconds). To set time press * button to increase by 1 second. On reaching 39 it returns to 1. It is saved automatically.

Incoming Call Keyboard On/Off (Keyboard can be used after incoming call)

Function	Display	Notes
Incoming Call Keyboard	In.Call Keyboard Off	Function On/Off. Press * to switch on/off (saved automatically).

Mode: Public/Private

Function	Display	Notes
Mode	Mode: Public	Telephone profile. Press * to switch on/off (saved automatically).

Programming (part 2)

8

Emergency and Free Numbers

Function	Display	Notes
Contains 10 free numbers, each of 4 digits/symbols Fr01- Fr10	Free No: Fr01:XXXX	Free prefix or emergency service. Opened to free dialing. Changing: Enter number. Press B - Save to memory. Press C to clear an existing prefix. Saved automatically.

Closed Numbers (Private Mode only)

Function	Display	Notes
Contains 10 free numbers, each of 4 digits/symbols CI01- CI10	Closed No: CI01:XXXX	Closed prefix or service. Changing: Enter number. Press B - Save to memory. Press C to clear an existing prefix. Saved automatically.

Dialing Method

Function	Display	Notes
Dialing Method	Tone Dialing Pulse Dialing	Press * to change Dialing Mode. Saved automatically. Tone Dialing -default

Start P.Tone (Lift handset PAYPHONE Tone)

Function	Display	Notes
Start P.Tone	Start P.Tone On	Function On/Off. Press * to switch on/off (saved automatically).

Incoming Call P.Tone (Incoming Call PAYPHONE Tone)

Function	Display	Notes
In.Call P.Tone	In.Call P.Tone On	Function On/Off. Press * to switch on/off (saved automatically).

Language (User Messages Only)

Function	Display	Notes
Language	Language: English	Press * to change language. Saved automatically.